





■ dekorasyon profilleri

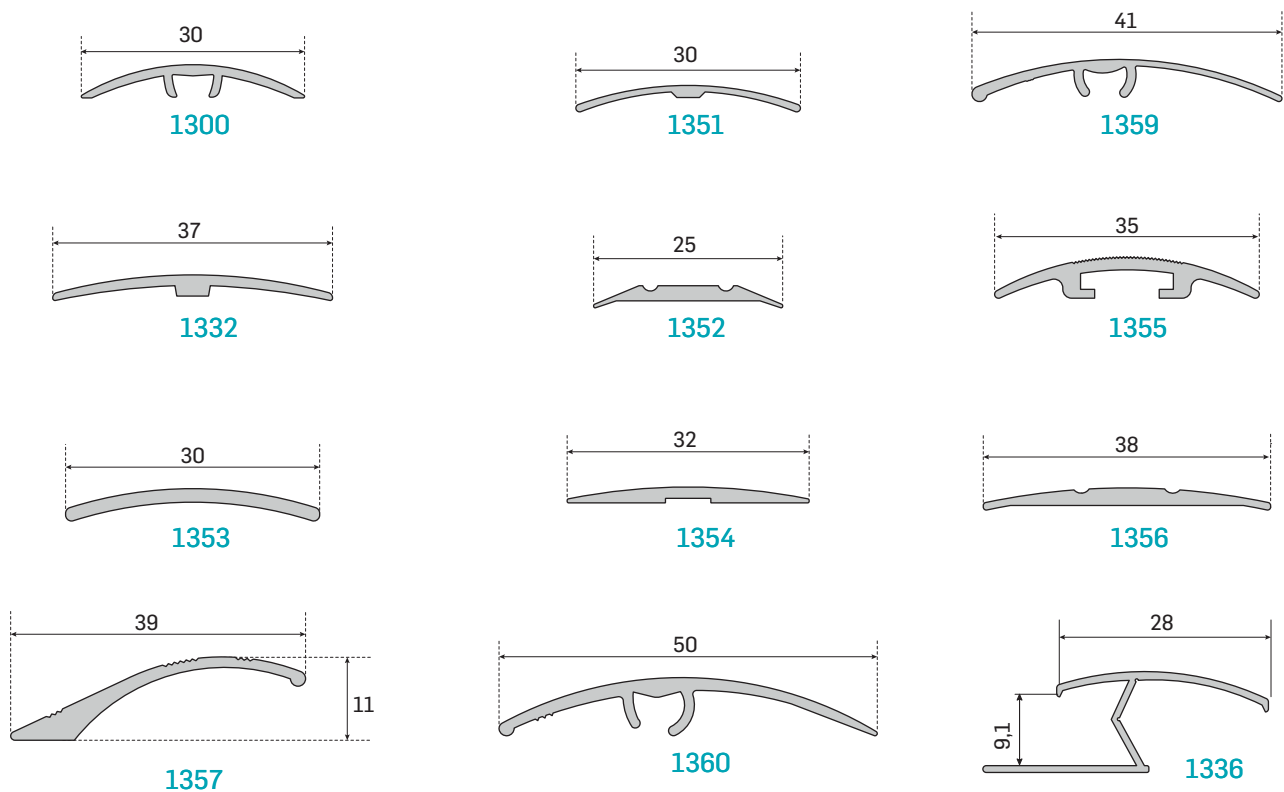


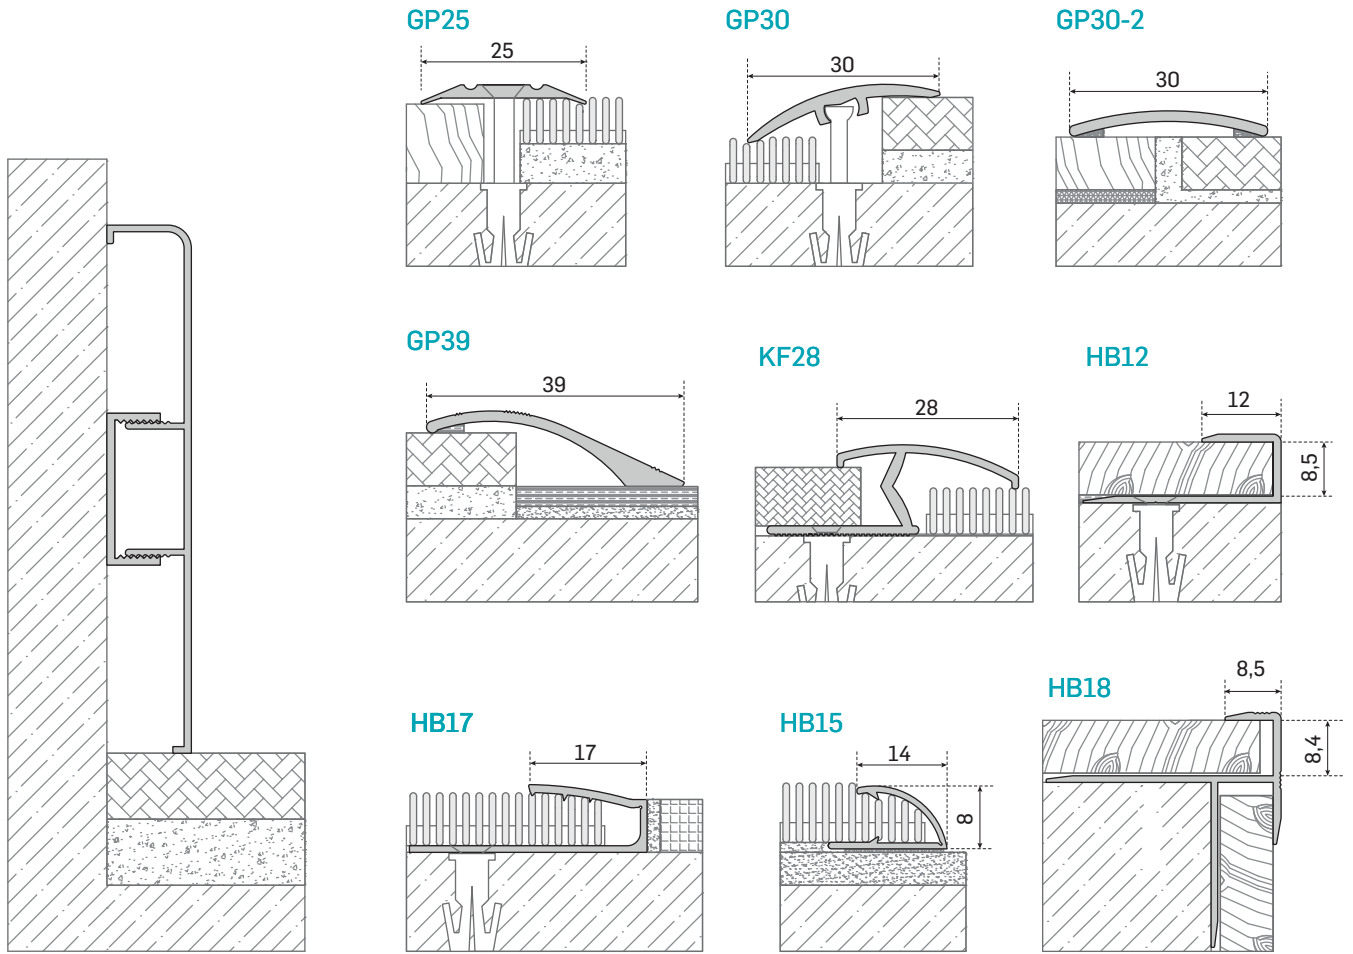

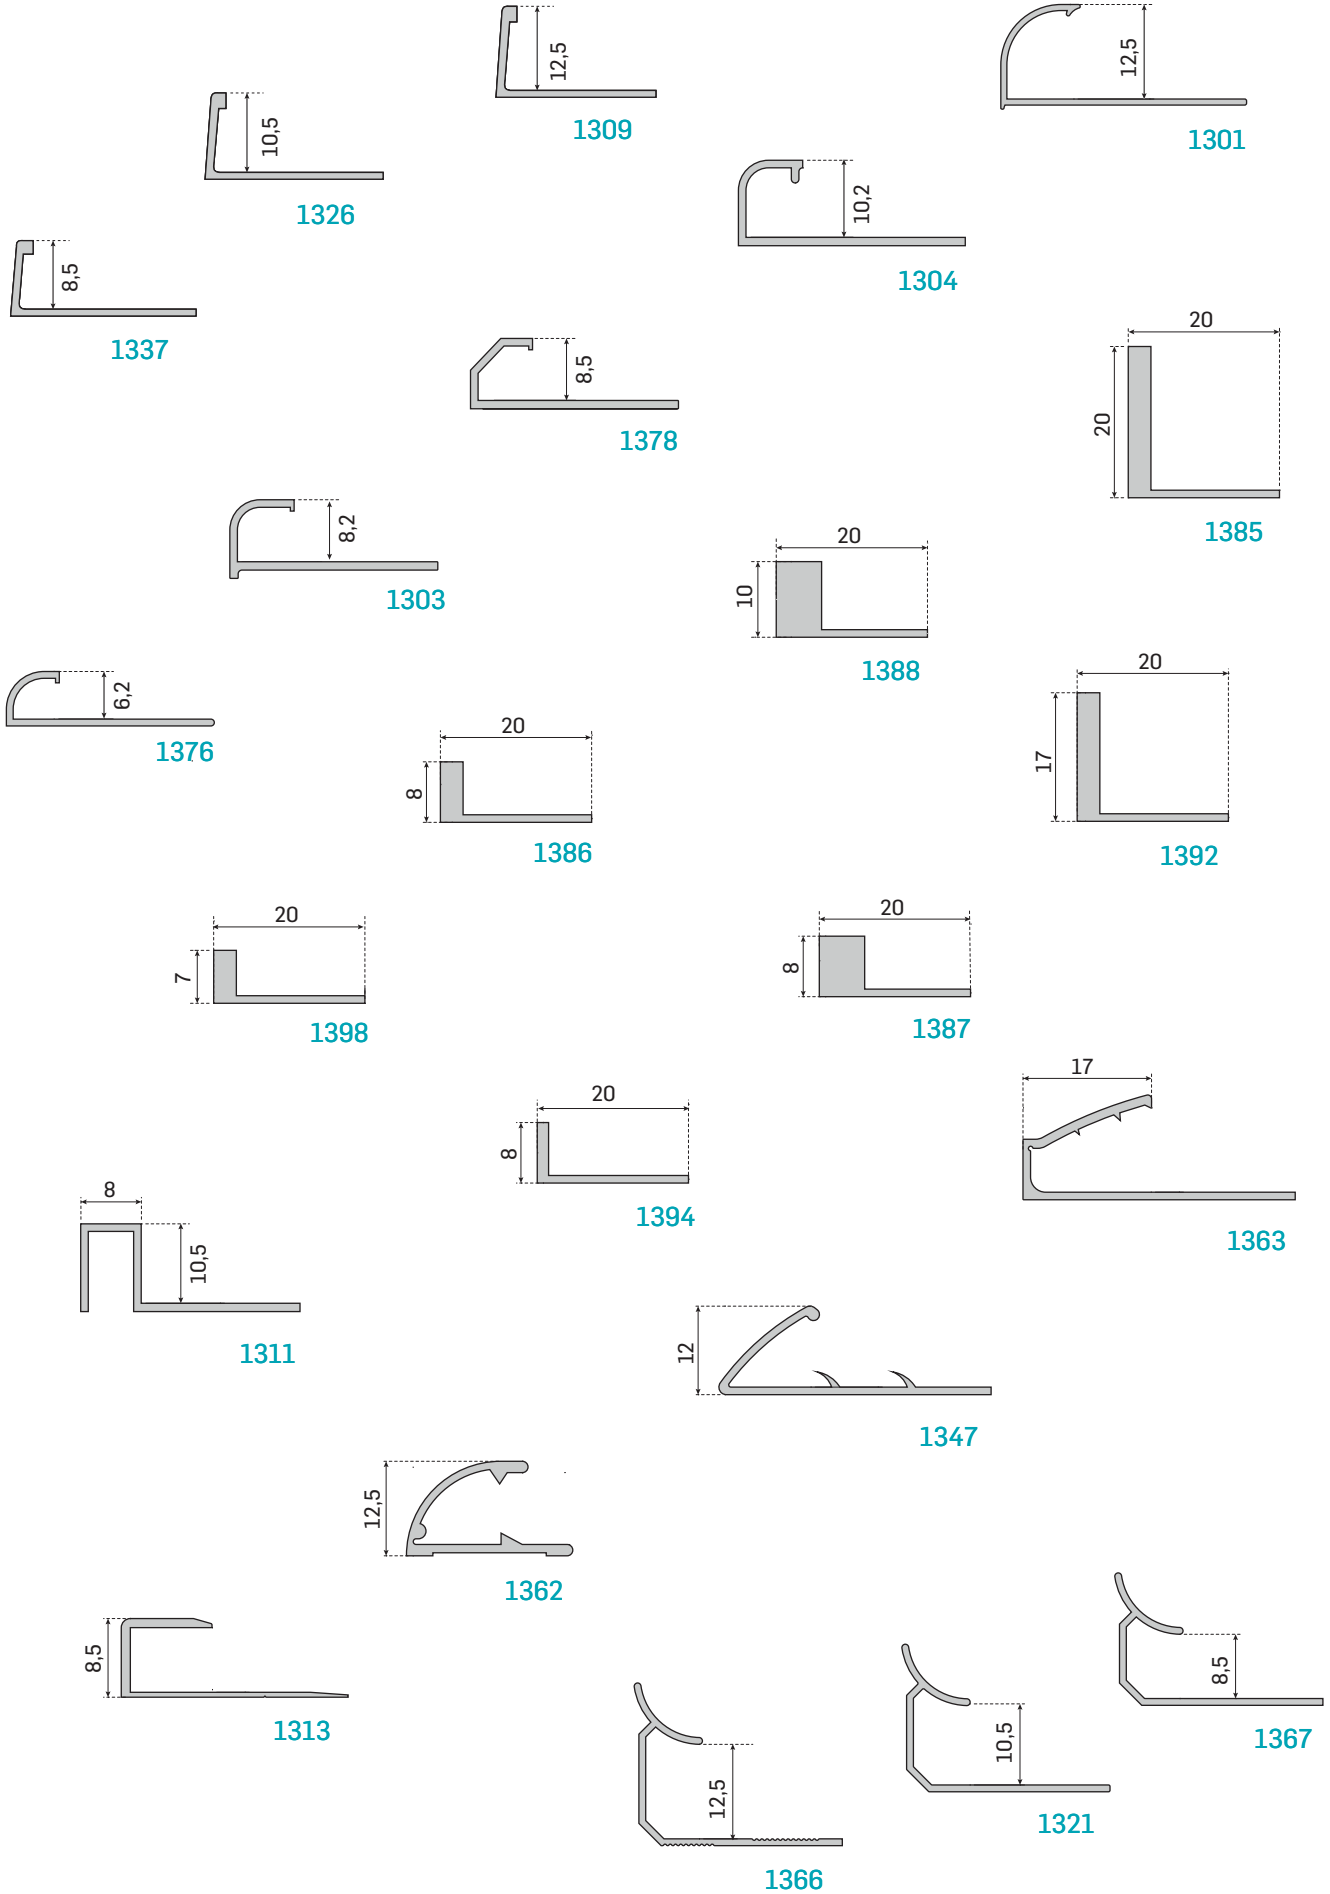


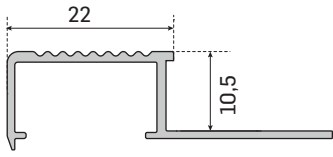


1319




1335

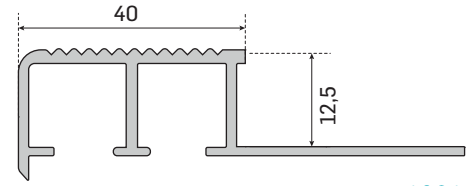


1381

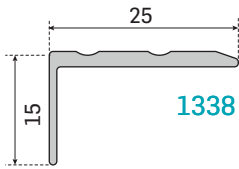


1338

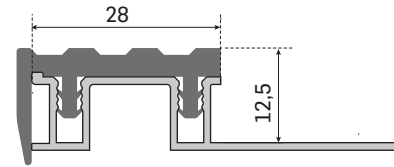


1334

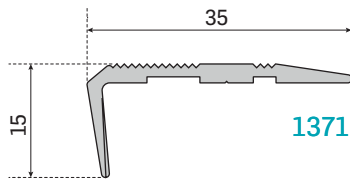


1371

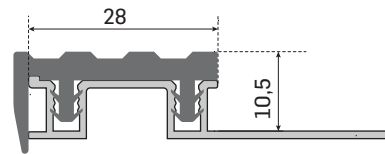


1317

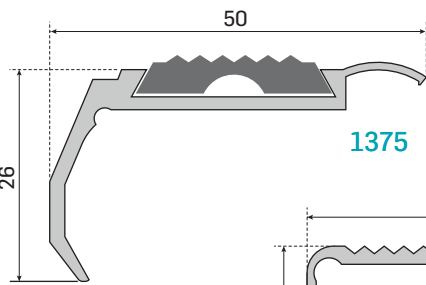


1375

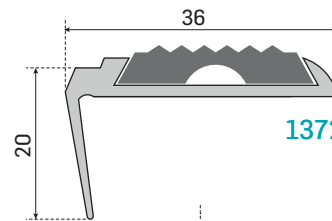


1372

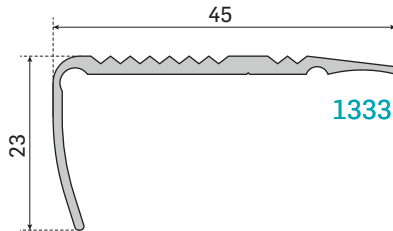


1333

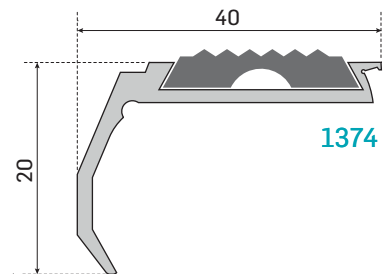


1374

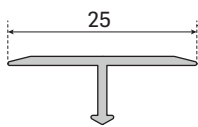


1380

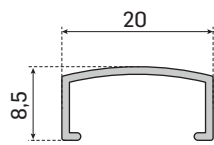


1316



1382





1310

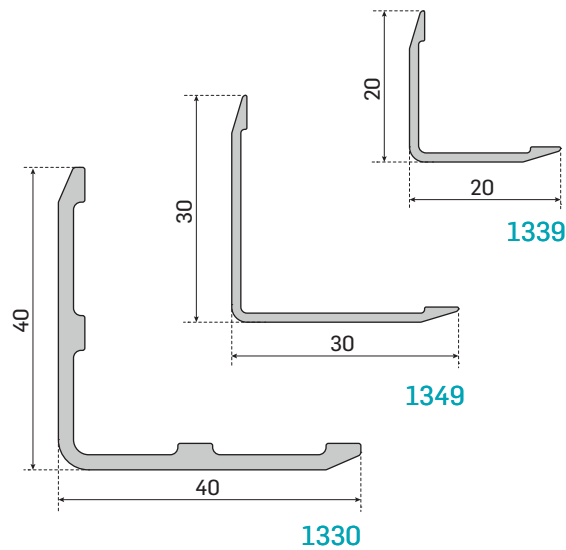


1330

1339


1349

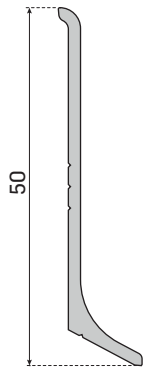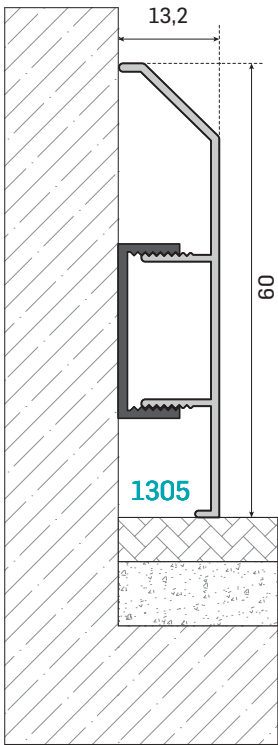


1296

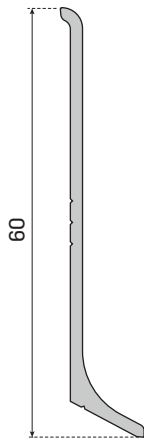


1297

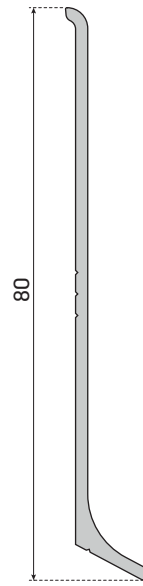


1298

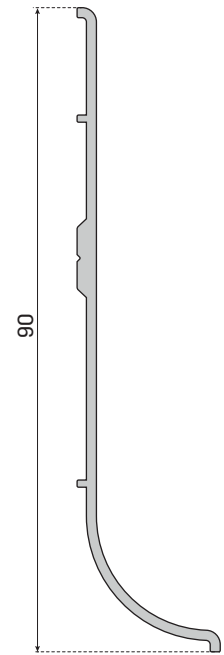


1397

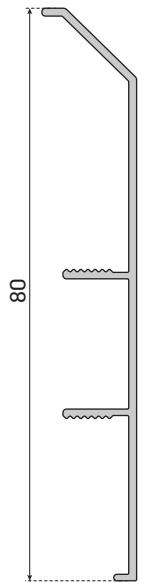


1324

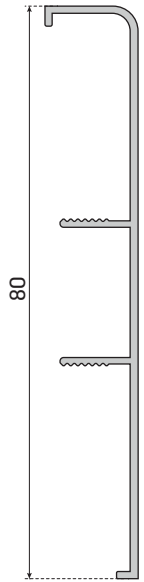


1346

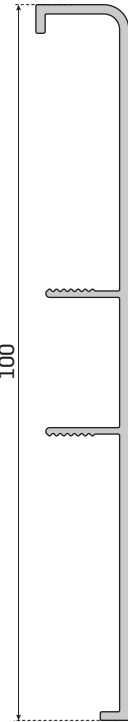

1327

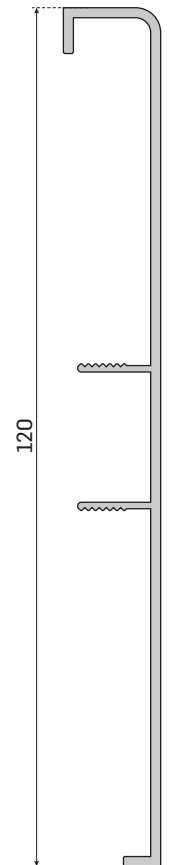


1307

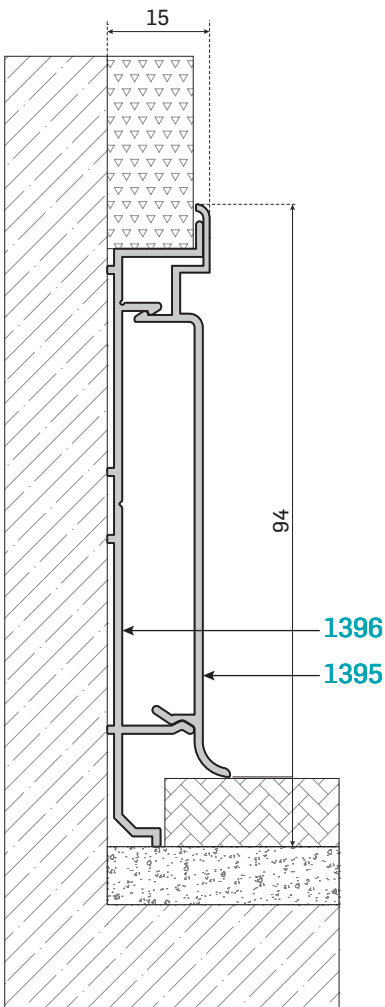



1396

1395

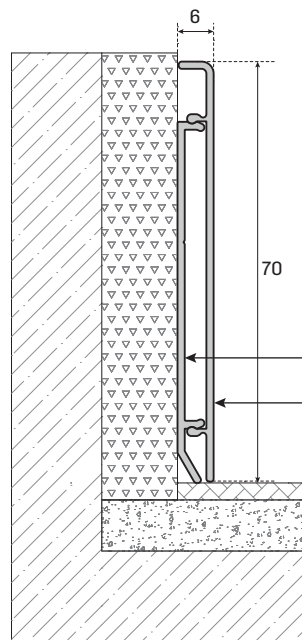


1690


1691

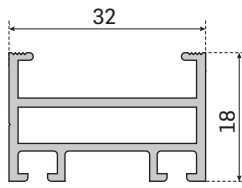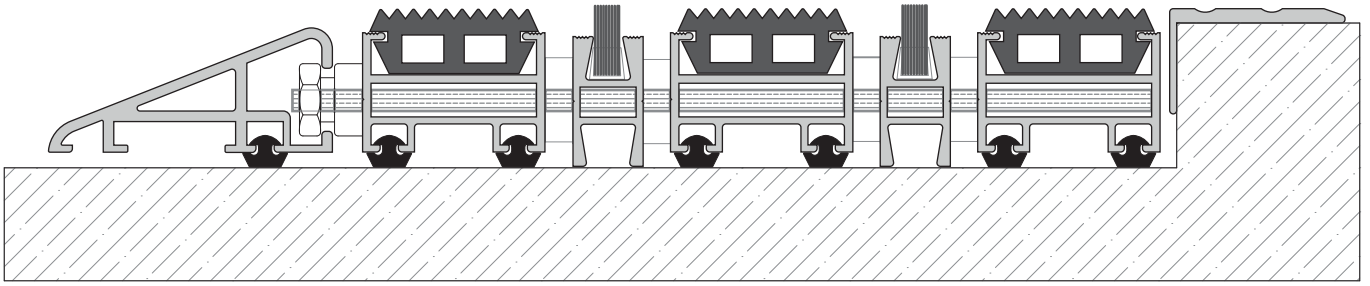


1451

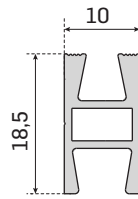


1454




1453

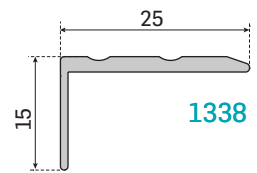

1338

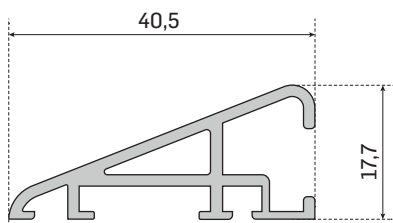

1452

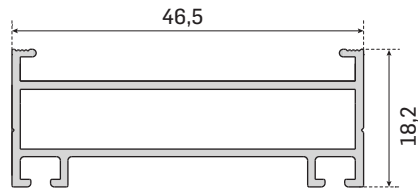

1455

